

HOT TUB SYSTEM FLUSH



Hot Tub System Flush is a concentrated cleaner for the internal pipe-work in Hot Tubs and Spas prior to drain down. It removes calcium scale, body fats and other unwanted harboured waste from the internal system.

GENERAL INSTRUCTIONS

1. Remove filter cartridge from filter compartment.
2. Ensure water level is at least 50mm above the jets.
3. Turn the hot tub/spa to run and empty the required dose into the filter compartment (see table below).
4. Run your hot tub/spa for a minimum of 30 minutes.
5. Turn off the hot tub/spa for 30 minutes.
6. Run the hot tub/spa for a further 30 minutes.
7. Drain the hot tub/spa and using a garden hose wash away any debris from around the shell and jets.
8. Refill with fresh water.
9. Sanitise the hot tub/spa with your chosen disinfectant prior to re-using.

DOSE RATE:

VOLUME OF WATER:	DOSE:
Up to 1,300 litres	250ml
1,300 litres to 2,600 litres	500ml

PLEASE NOTE: For normal use, treatment should be carried out at least every 12 weeks prior to drain down as this will assist in the removal of waste build up. For heavy use, treatment should be carried out on a 6-week basis.

For further information go to our website www.lo-chlor.co.uk.